


No. 422BP

To Replace Seat Disk

1. Turn off the water supply, then flush the toilet.
2. Pull off worn seat disc from post.
3. Snap on new seat disc.
4. Turn on water supply.

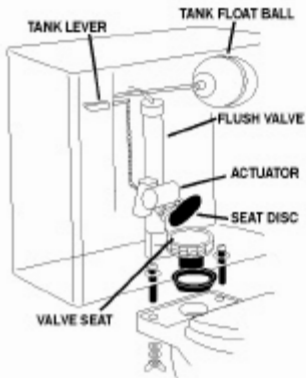

UPC:

049057042298