


## No. 427BP

### To Replace Valve Seal

1. Shut off water supply to toilet and flush toilet to empty tank.
2. Remove refill tube from stop cap, then unscrew and remove existing stop cap.
3. Lift off the float assembly from the center guide, and at the same time detach the trip lever.
4. Replace valve seal. Place float assembly back onto center guide and re-attach trip lever.
5. Screw stop cap onto center guide and re-insert refill tube into stop cap.
6. Make certain the flush valve moves freely and seats properly by flushing handle of toilet.
7. Turn on water supply.

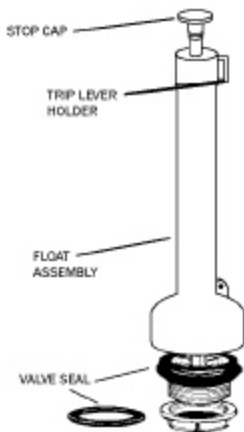

**UPC:**

**049057042793**