 
Mansfield® Seal - Fits Both:









*Scroll down for Rigid Flapper Instructions

Watch install video before continuing to instructions


#210/211 Tower Instructions



 Turn off water supply.



Twist white cap counterclockwise to remove.



Pull canister up to remove and access seal.



Remove old seal. Apply new seal around the base of the tower.





Lower the canister back on flush valve base





Twist white cap clockwise.





Turn on water supply.

Rigid flapper - seal #630-0030 Instructions

 


Turn off water supply.


Translations




Remove the flapper by pulling up on each side to detach from flush valve.



 Turn white tabs counterclockwise to detach white ring.



Remove the old seal. Place the new seal around the center ring of the flapper.

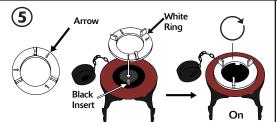

Place the white ring back by aligning one of the arrows to the black insert. Twist clockwise to lock into place





Place flapper onto the flush valve ears and snap into place.



Turn on water supply.



©2023 Lavelle Industries, Inc. Burlington, WI • Made in USA • 262-763-2434 • korky.com

457BP - PK0808